## Setup


Plug in BB-ESP32-KIOSK with a USB-C cable.

BB-ESP32-KIOSK will go through 3 stages:


Booting up:



• Running Setup:

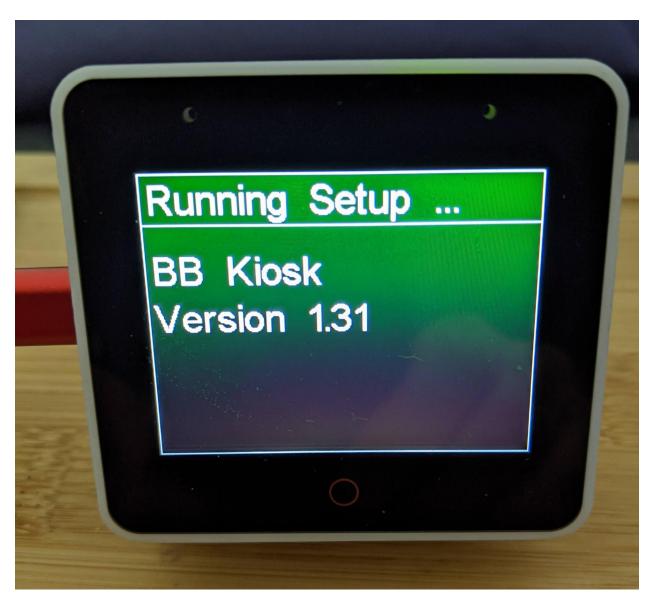

Setup Page:

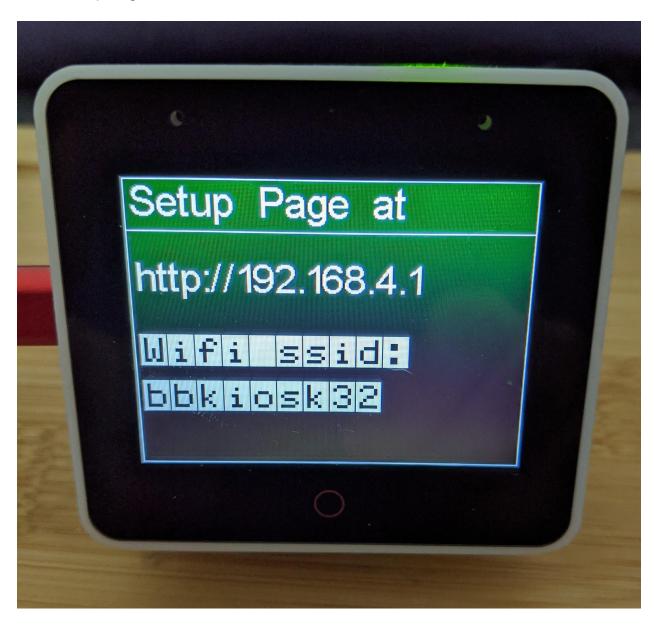


If you see the "Setup Page at" Screen, that means BB-ESP32-KIOSK launched a temporary wifi SSID named 'bbkiosk32'.

The password is '123456789'.


Connect your mobile phone/PC to that SSID using the password.

There will be no Internet Access via this ssid:

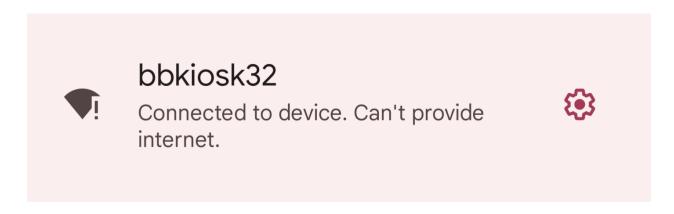


Navigate your mobile phone/PC to http://192.168.4.1

Enter the name of your Wifi SSID and password.

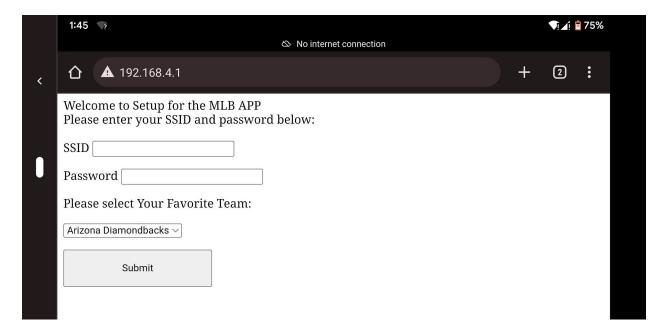


On the same page, select your team from the drop down:

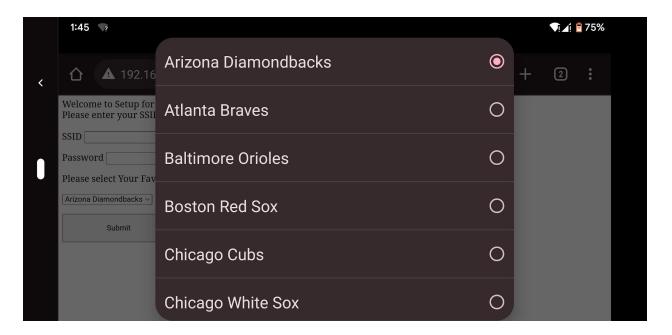


Click Submit (on the same page)

Click Reboot if Successful

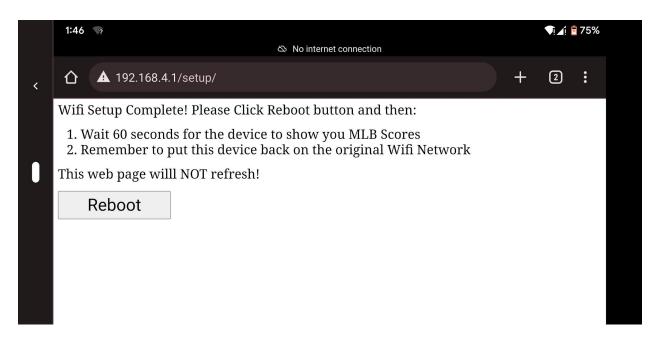


The page will NOT Refresh (This is OK and expected):

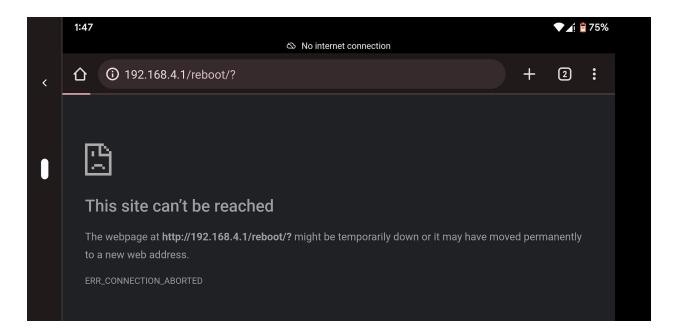

(Connect back to Your Normal Wifi SSID to get your mobile/PC back online.)

The kiosk should boot and show startup messages:

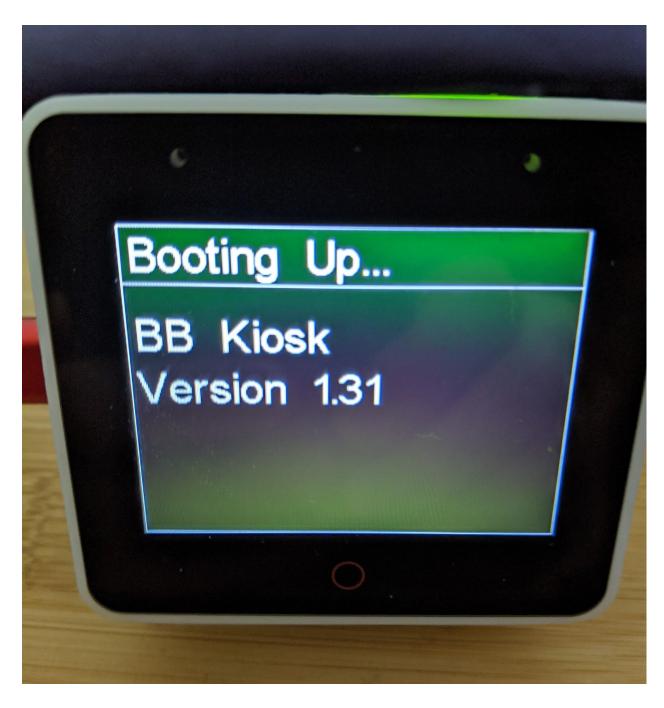

Once Done, it will show you the status of Your Team's Game if in progress.